


FOLD HERE
AGAINST EDGE
OF DOOR

60MM BACKSET AT 100% (PRINT-OUT)

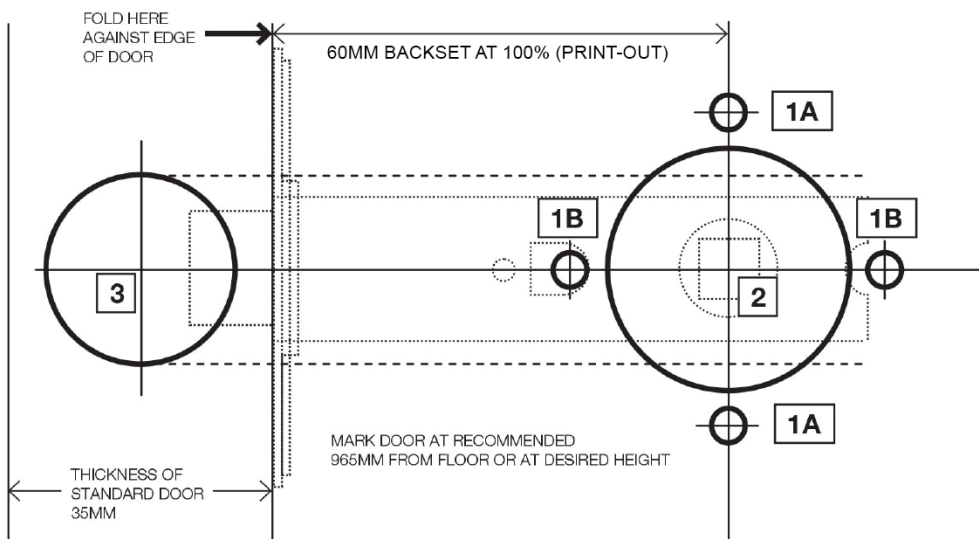

INSTALLATION TEMPLATE FOR PASSAGE SET

Important Note: Template is a guide only. Measurements should be checked prior to installation.

DRILLING SEQUENCE

1. DRILL TWO HOLES DIAMETER 4.5MM.
1A. FOR VERTICAL FIXING; OR
1B. FOR HORIZONTAL FIXING.
CENTRES 1A-1A OR 1B-1B: 41.5MM.
2. DRILL ONE HOLE DIAMETER 32MM.
3. DRILL ONE HOLE DIAMETER 25MM.

PLEASE ENSURE YOUR INSTALLER/FITTER FOLLOWS THESE INSTRUCTIONS. IT IS IMPERATIVE FOR THE CORRECT FUNCTION OF OUR DOOR HARDWARE THAT ALL ITEMS SUPPLIED INCLUDING GRUB SCREWS, TIE BOLTS AND SOLID SPLIT SPINDLES ARE INSTALLED AS CLEARLY INSTRUCTED.