



FOLD HERE  
AGAINST EDGE  
OF DOOR

VARIABLE BACKSET  
50MM & 60MM REFER  
TO PRODUCT

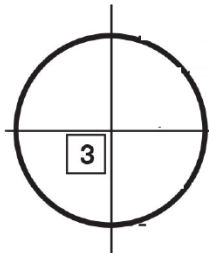

DOOR MEASUREMENT

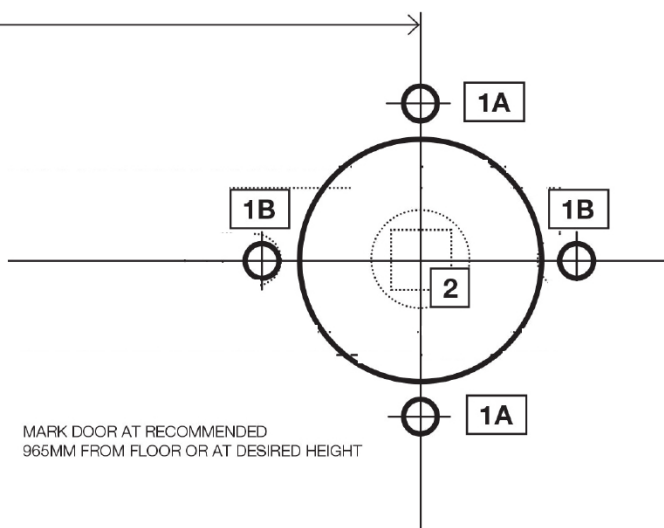

MARK DOOR AT RECOMMENDED  
965MM FROM FLOOR OR AT DESIRED HEIGHT

## INSTALLATION GUIDE

**Important Note:** Template is a guide only. Measurements should be checked prior to installation.

## DRILLING SEQUENCE

1. DRILL TWO HOLES DIAMETER 4.5MM.  
1A. FOR VERTICAL FIXING; OR  
1B. FOR HORIZONTAL FIXING.  
CENTRES 1A-1A OR 1B-1B: 41.5MM.
2. DRILL ONE HOLE DIAMETER 25MM.
3. DRILL ONE HOLE DIAMETER 25MM.

PLEASE ENSURE YOUR INSTALLER/FITTER FOLLOWS THESE INSTRUCTIONS. IT IS IMPERATIVE FOR THE CORRECT FUNCTION OF OUR DOOR HARDWARE THAT ALL ITEMS SUPPLIED INCLUDING TIE BOLTS AND SOLID SPLIT SPINDLES ARE INSTALLED AS CLEARLY INSTRUCTED.