


FOLD HERE
AGAINST EDGE
OF DOOR

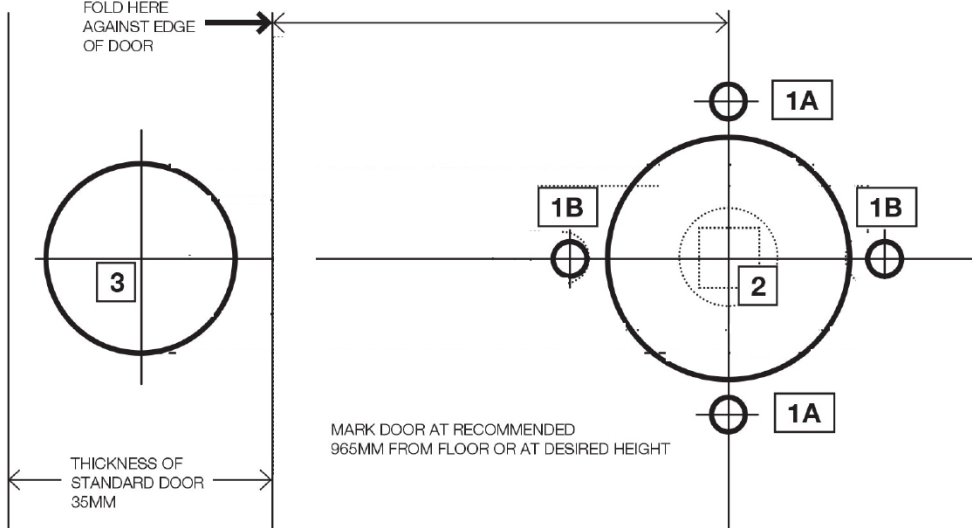

INSTALLATION TEMPLATE

Important Note: Template is a guide only. Measurements should be checked prior to installation.

DRILLING SEQUENCE

1. DRILL TWO HOLES DIAMETER 4.5MM.
1A. FOR VERTICAL FIXING; OR
1B. FOR HORIZONTAL FIXING.
CENTRES 1A-1A OR 1B-1B: 41.5MM.
2. DRILL ONE HOLE DIAMETER 25MM.
3. DRILL ONE HOLE DIAMETER 25MM.

PLEASE ENSURE YOUR INSTALLER/FITTER FOLLOWS THESE INSTRUCTIONS. IT IS IMPERATIVE FOR THE CORRECT FUNCTION OF OUR DOOR HARDWARE THAT ALL ITEMS SUPPLIED INCLUDING TIE BOLTS AND SOLID SPLIT SPINDLES ARE INSTALLED AS CLEARLY INSTRUCTED.